




## Step-by-Step Installation

## (RS01) Rotofast™ Snap-On Anchor

Rotofast Snap-On Anchors are a secure and fast solution for acoustical panel installation.


See [rotofast.com](http://rotofast.com) for the Rotofast Snap-On Anchor installation video.

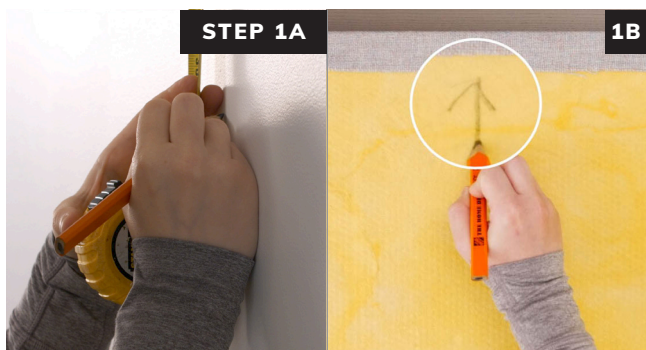

Measure and mark the location where panel will be placed and mark the orientation on the back of the panel.



Screw Rotofast Snap-On Anchors into back of the panel using the Rotofast driver tool. Do not over-tighten.

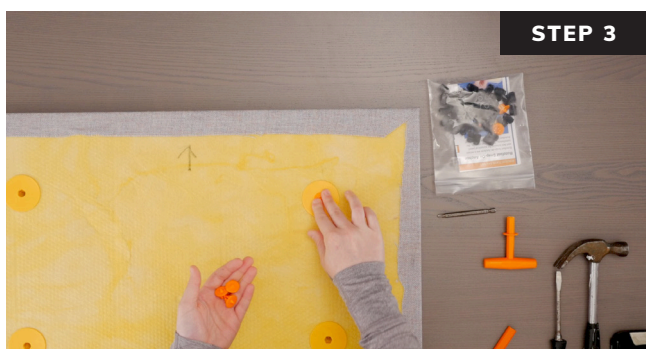

Insert reusable marking plugs into the Snap-On anchors.




Push panel against wall to mark anchor locations.



Screw ratchets to wall at marked locations. Flat end of ratchet goes against the wall, curved end faces out.

#8 screws recommended

\*Hollow wall anchors are recommended for drywall applications.

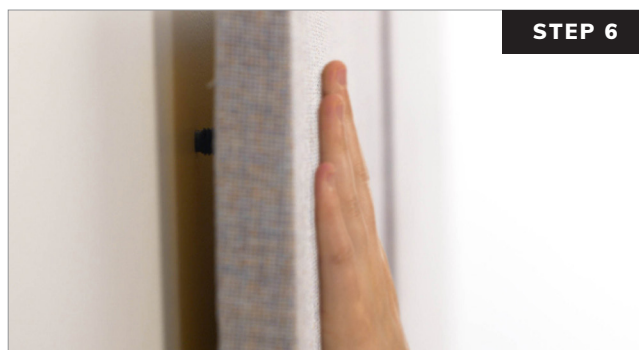

Firmly strike panel onto ratchets to complete the installation.

Ask your panel manufacturer or Rotofast representative for recommended anchor locations and quantities per panel.

Rotofast  
Incorporated

2020 Kings Road  
Sydney, Nova Scotia  
Canada B1L 1C4

Toll Free - USA & Canada  
1-888-545-7444

International  
00-1-902-578-2534

Email  
[info@rotofast.com](mailto:info@rotofast.com)

Website  
[www.rotofast.com](http://www.rotofast.com)






## Step-by-Step Installation

### (RS01) Rotofast™ Snap-On Anchor **ALTERNATE METHOD**

Rotofast Snap-On Anchors are a secure and fast solution for acoustical panel installation.  
See [rotofast.com](http://rotofast.com) for the Rotofast Snap-On Anchor Alternate Method installation video.

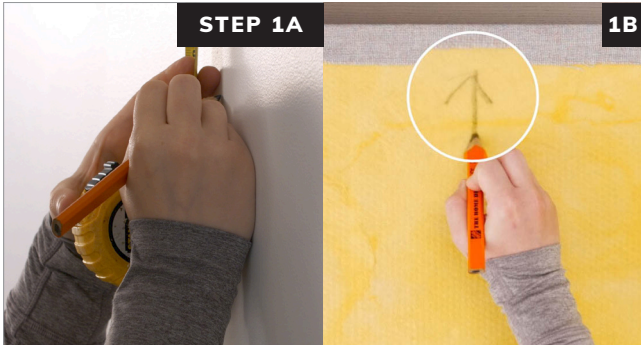

Measure and mark the location where panel will be placed and mark the orientation on the back of the panel.




Mark the locations on the wall where the black ratchets will be installed in Step 3. For help with the number and placement of anchors, contact Rotofast.




Screw black ratchets to wall at marked locations using the correct fastener for your substrate. Flat end of ratchet goes against the wall, curved end faces out.



Push the panel onto the black ratchets to make indentations in the panel core material.

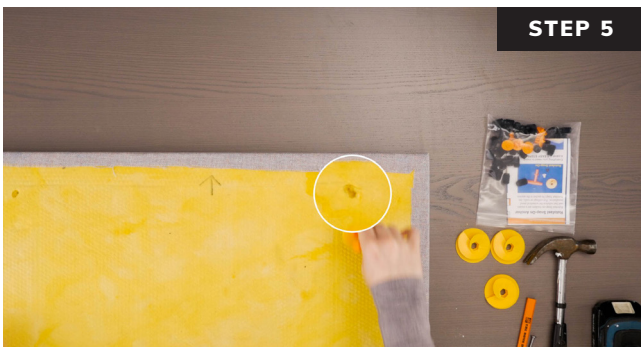

Screw anchor into the back of the panel at the location where the black ratchets made indentations. Do not over-tighten.

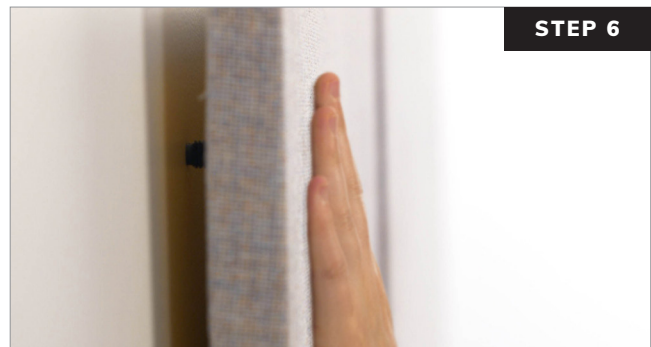

Firmly strike panel onto ratchets to complete the installation.  
**Ask your panel manufacturer or Rotofast representative for recommended anchor locations and quantities per panel.**

Rotofast  
Incorporated

2020 Kings Road  
Sydney, Nova Scotia  
Canada B1L 1C4

Toll Free - USA & Canada  
1-888-545-7444

International  
00-1-902-578-2534

Email  
[info@rotofast.com](mailto:info@rotofast.com)

Website  
[www.rotofast.com](http://www.rotofast.com)

